



# RAGE 2

Multi Purpose S.A.W.  
085-0004.01

## Service Parts List

Item	Description	Part No	Qty	Item	Description	Part No	Qty	Item	Description	Part No	Qty
M1	Head Lock down unit	R2SM1	1	61	Adjusting screw M8x50	R2S61	1	140	Swarf tray	R2S140	1
M2	Back vice	R2SM2	1	62	Washer	R2S62	2	141	Swarf tray cover	R2S141	1
M3	Vice screw unit	R2SM3	1	63	Spring washer	R2S63	2	142	Screw M4x10	R2S142	10
1	Screw M5x16	R2S1	2	64	Inner Hex Bolt M6x20	R2S64	2	143	Rubber foot	R2S143	4
2	Dust filter	R2S2	1	65	Connecting plate	R2S65	1	144	Cap screw M8x35	R2S144	4
3	Bearing support plate	R2S3	1	71	Allen wrench 8mm	R2S71	1	145	Flat washer	R2S145	2
4	Wave washer	R2S4	1	72	Screw M5x15	R2S72	2	146	Spring washer	R2S146	2
5	Screw M5x10	R2S5	2	73	Wrench holder	R2S73	1	147	Cap screw M8x30	R2S147	2
6	Washer	R2S6	2	74	Base	R2S74	1	148	Grub screw M4	R2S148	1
7B	Label set 115v	R2S7B	1	75	Washer	R2S75	4				
8	Cap screw M5x15	R2S8	2	76	Spring washer	R2S76	4				
9	Depth stop	R2S9	1	77	Cap screw M10x30	R2S77	4				
10	Motor housing	R2S10	1	78	Nut	R2S78	1				
12	Wave washer	R2S12	1	79	Washer	R2S79	1				
13	Screw M5x10	R2S13	1	80	Spring washer	R2S80	1				
14	Left handle	R2S14	1	81	Cap screw M6x28	R2S81	1				
15	Tapping screw ST4.2x25	R2S15	6	82	Washer	R2S82	1				
16	Screw M5x45	R2S16	1	83	Spring washer	R2S83	1				
17	Screw M5x50	R2S17	1	84	Cap screw M5x20	R2S84	1				
18	Screw M5x30	R2S18	1	88	Washer	R2S88	1				
19	Tapping screw ST4.2x19	R2S19	3	89	Spring washer 10	R2S89	1				
20	Tapping screw ST4.2x15	R2S20	2	90	Cap screw M10x25	R2S90	1				
21	Cable clamp	R2S21	1	96	V-vice	R2S96	1				
22	Cable sheath	R2S22	1	97	Cast iron plate	R2S97	1				
23C	Cable & Plug 115v US	R2S23C	1	98	Lock Ring	R2S98	1				
24	Right handle	R2S24	1	99	Moving vice jaw	R2S99	1				
25	Nut M5	R2S25	3	100	Split Pin 3x26	R2S100	1				
26	On/Off Switch	R2S26	1	101	Washer	R2S101	1				
27	Rubber cover	R2S27	1	102	Connecting rod	R2S102	1				
28	Carbon brush holder	R2S28	2	103	Vice screw support	R2S103	1				
29	Carbon brush (pair)	R2S29	1	104	Handle set	R2S104	1				
30	Carbon brush holder cap	R2S30	2	106	Plastic guard	R2S106	1				
31B	Armature 115v	R2S31B	1	107	Cap screw M4x12	R2S107	2				
32	Spring washer	R2S32	1	108	Blade guard (1)	R2S108	1				
33	Screw M5x80	R2S33	1	109	Screw M5x90	R2S109	4				
34	Air baffle	R2S34	1	110	Rubber ring	R2S110	2				
35	Bearing (6200)	R2S35	1	111	Screw M5x12	R2S111	1				
36B	Field Coil 115v	R2S36B	1	112	Screw M4x10	R2S112	1				
37	Bearing (6202)	R2S37	1	113	Spring	R2S113	1				
38	Gearbox cover	R2S38	1	114	Screw M4x10	R2S114	1				
39	Key 5x10	R2S39	1	115	Blade guard (2)	R2S115	1				
40	Spring	R2S40	1	116	Circlip 42	R2S116	1				
41	Circlip	R2S41	1	117	Inner flange	R2S117	1				
42	Spindle lock	R2S42	1	118	Screw (2)	R2S118	1				
43	Bearing (6000)	R2S43	1	119	Plastic wheel	R2S119	1				
44	Gear	R2S44	1	120	Connecting rod (1)	R2S120	1				
45	Flat key 5x12	R2S45	1	121	Screw (4)	R2S121	1				
46	Shaft (1)	R2S46	1	122	Nut M5	R2S122	1				
47	Bearing (6200)	R2S47	1	123	Connecting rod (2)	R2S123	1				
48	Bearing (6001)	R2S48	1	124	Screw (1)	R2S124	1				
49	Gear	R2S49	1	125	Screw (3)	R2S125	1				
50	Flat key 6x12	R2S50	1	126	Blade guard (3)	R2S126	1				
51	Shaft (2)	R2S51	1	127	Spring washer	R2S127	4				
52	Bearing (6204)	R2S52	1	128	Screw M4x10	R2S128	4				
53	Gearbox	R2S53	1	130	Blade guard cover	R2S130	1				
54	Circlip	R2S54	1	131	Washer	R2S131	1				
55	Screw M4x12	R2S55	3	132	Screw	R2S132	1				
56	Spring washer	R2S56	2	134	Screw Knob	R2S134	1				
57	Pivot pin	R2S57	1	136	Outer flange	R2S136	1				
58	Torsion spring	R2S58	1	137	Washer	R2S137	1				
59	Aluminum support	R2S59	1	138	Spring Washer	R2S138	1				
60	Nut M8	R2S60	1	139	Cap screw M10x25	R2S139	1				

Evolution Power Tools LLC  
5567 Carey Avenue, Davenport, Iowa, 52807, USA  
Tel: 1 866 386 8665 Fax: 1 563 386 8010 www.evolutionpowertools.com



## RAGE 2

Multi Purpose S.A.W.  
085-0004.01

Service Parts List