



**evolution**<sup>®</sup>  
POWER TOOLS

**RAGE**  
Multi Purpose Circular S.A.W

Service Parts List

REV.  
1.01

Item	Description	Part No	Qty	Item	Description	Part No	Qty
1	Dust cover	RSP1	1	68	Safety goggle	RSP68	1
2	Mirror	RSP2	1	69	Ear plug	RSP69	1
3	Side dust cover	RSP3	1	70	Hex wrench	RSP70	1
4	Tapper screw	RSP4	2	71	Carton	RSP71	1
5	Side dust cover ( r )	RSP5	1	72	Blow carry case	RSP72	1
6	Screw	RSP6	1	73	Length adjustor	RSP73	1
7	Power cord cover	RSP7	1	74	Side handle	RSP74	1
8	Screw	RSP8	1	75	Tension spring	RSP75	1
9	Screw	RSP9	4	76	Nut	RSP76	1
10C	Power cord 115v	RSP10C	1	77	Screw	RSP77	1
11	Lead wire	RSP11	1	79	Screw	RSP79	1
12	Handle ( r )	RSP12	1	80	Pivot bracket	RSP80	1
13	Power cord clamp	RSP13	1	81	Tapper screw	RSP81	2
14	Tapper screw	RSP14	2	82	Screw	RSP82	1
15	Capacitor	RSP15	1	83	Lock knob	RSP83	1
16	Choke	RSP16	1	89	C-ring	RSP89	1
17B	Over load switch 115v	RSP17B	1	90	Label	RSP90	1
18	Cord guard	RSP18	1	91	Warning label	RSP91	1
19	Switch	RSP19	1	92	Warning label	RSP92	1
20	Handle ( l )	RSP20	1	93B	Machine label 115v	RSP93B	1
21	Tapper screw	RSP21	3	94	Carry case label	RSP94	1
22	Hex set screw	RSP22	1	95	Label	RSP95	1
23	Spring washer	RSP23	1	96	Safety label	RSP96	1
24	Washer	RSP24	1	97	Serial no. label	RSP97	1
25	Flange (top)	RSP25	1	98	Manual	RSP98	1
27	Flange (bottom)	RSP27	1	99	Cover	RSP99	1
28	Screw	RSP28	3	100	Adaptor	RSP100	1
29	Bearing cover	RSP29	1	101	Tapper screw	RSP101	1
30	Spindle	RSP30	1	102	Washer	RSP102	1
31	Key	RSP31	1	103	Washer	RSP103	1
32	Ball bearing	RSP32	1	106	Wire cover	RSP106	2
33	Screw	RSP33	1	107	Tapper screw	RSP107	1
34	Bearing retainer	RSP34	1	108	Warning label	RSP108	1
35	Collar	RSP35	1	109B	CD	RSP109B	1
36	Helix gear	RSP36	1				
38	C ring	RSP38	1				
39	Ball bearing	RSP39	1				
40	Body	RSP40	1				
41	Stator cover	RSP41	1				
42	Ball bearing	RSP42	1				
43B	Armature 115v	RSP43B	1				
44	Bearing washer	RSP44	1				
46B	Field assembly 115v	RSP46B	1				
47	Ball bearing	RSP47	1				
48	Spring washer	RSP48	1				
49	Motor housing	RSP49	1				
50	Hex. set screw	RSP50	2				
51	Spring lock assembly	RSP51	1				
52	Tapper screw	RSP52	2				
54	Screw	RSP54	3				
55	Brush holder	RSP55	2				
56	Carbon brush set	RSP56	2				
57	Brush cap	RSP57	2				
58	Blade cover	RSP58	1				
59	Knob	RSP59	1				
60	Screw	RSP60	1				
61	Bracket stop	RSP61	1				
62A	Base assembly	RSP62A	1				
64	Lever	RSP64	1				
65	E ring	RSP65	1				
66	Screw	RSP66	1				
67	Screw	RSP67	2				

Evolution Power Tools LLC  
 5567 Carey Avenue, Davenport, Iowa, 52807, USA  
 Tel: 1 866 386 8665 Fax: 1 563 386 8010 www.evolutionpowertools.com

