


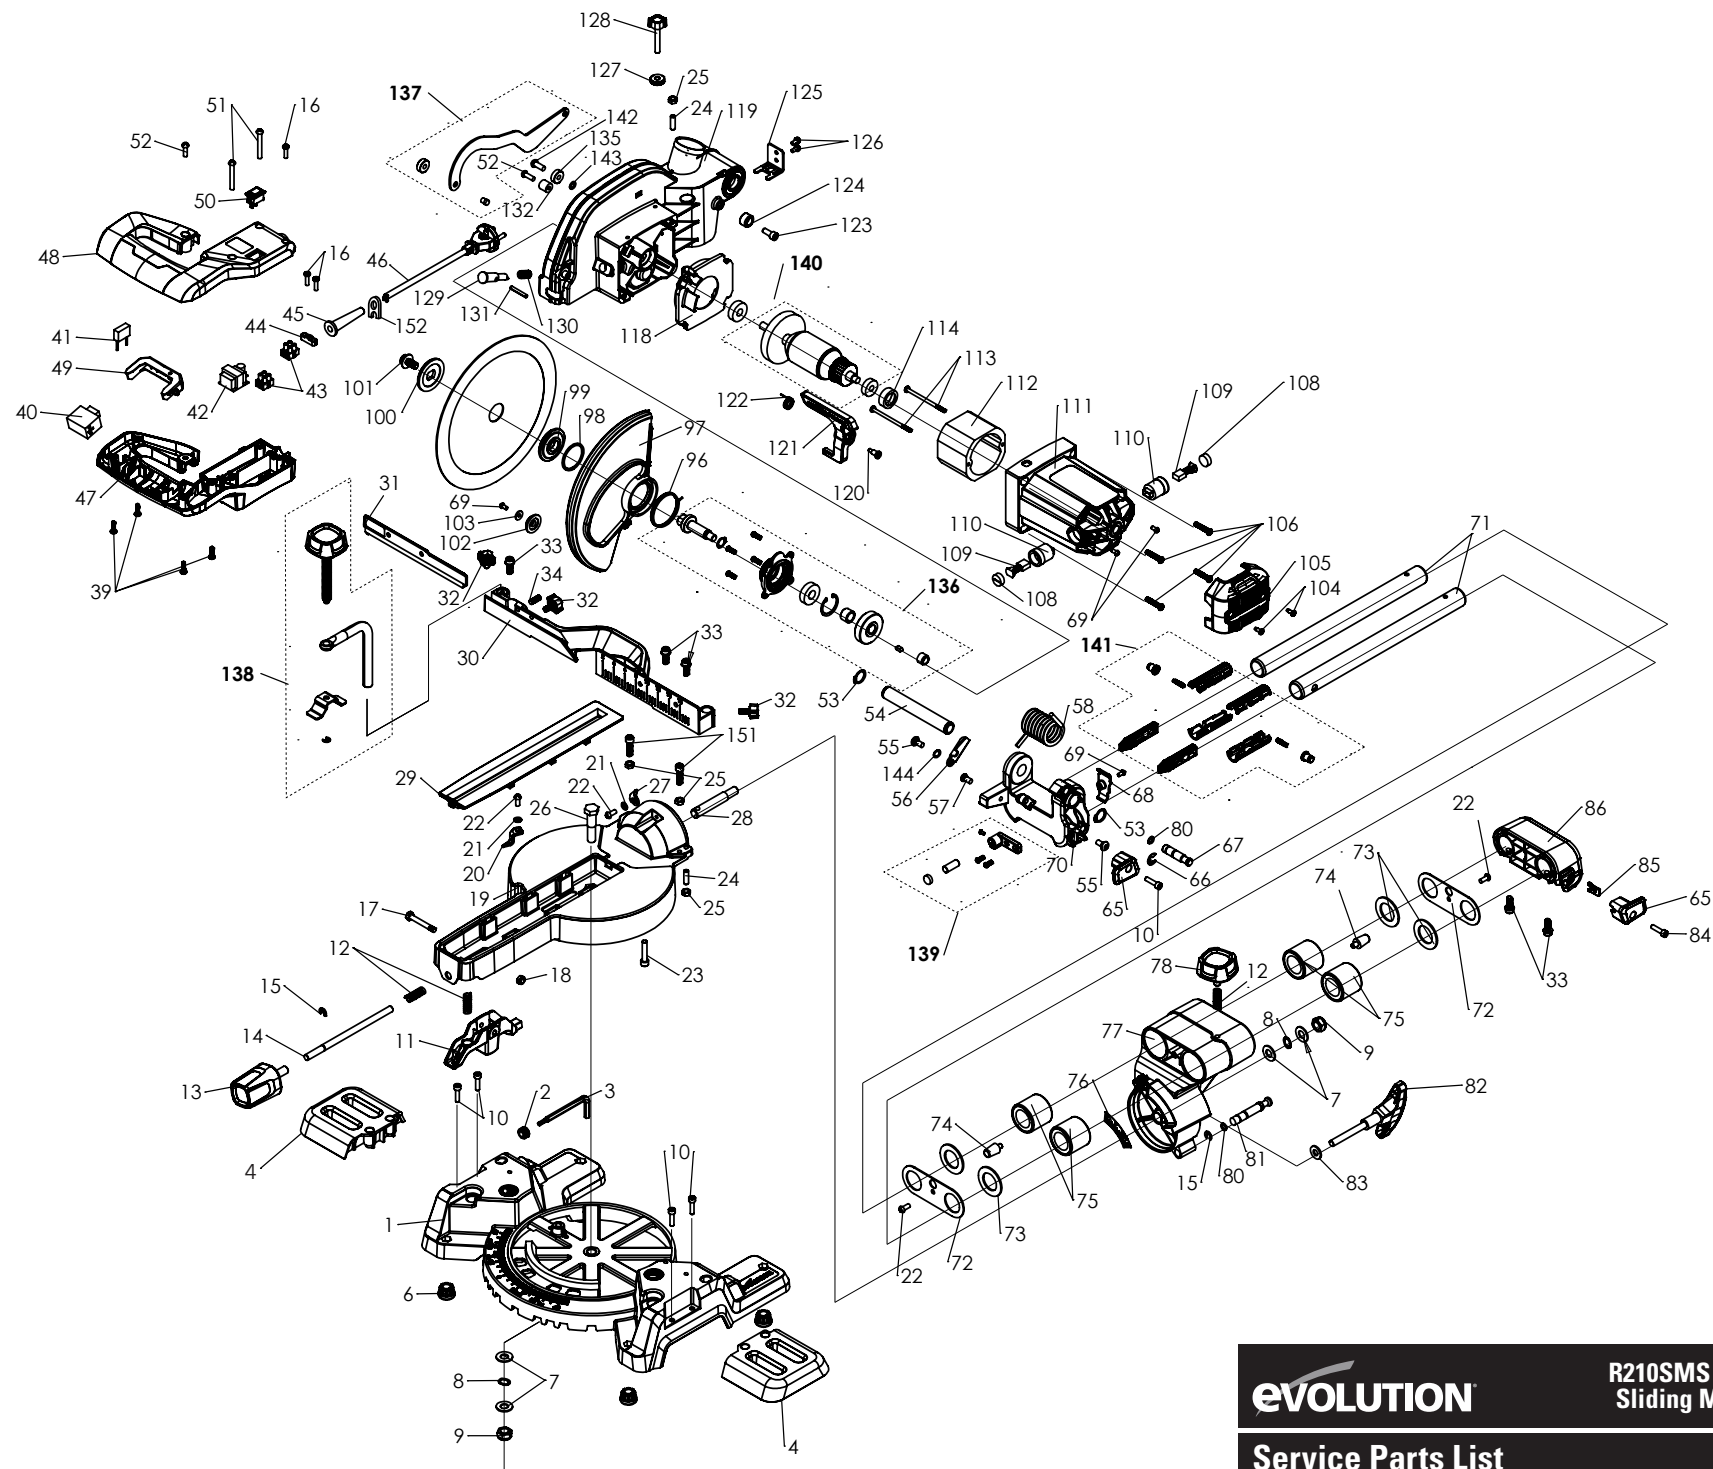

evolution

R210SMS (110V UK)
Sliding Mitre Saw

Service Parts List

048-0002.02

DWG No	Description	Part Code	Qty	DWG No	Description	Part Code	Qty	DWG No	Description	Part Code	Qty				
1	Base	048-0275	1	73	Shaft Seal Ring	030-0192	4								
2	Grommet 10mm	048-0101	1	74	Rubber Stop	030-0152	2								
3	Dual Hex Key	048-0102	1	75	Linear Ball Beaing	048-0162	4								
4	Table extension	048-0274	1	76	Bevel Label	048-0163	1								
6	foot	048-0105	4	77	Bevel bracket	048-0164	1								
7	Flat Washer 10mm	F-W-M10-ST-BO	4	78	Sliding Lock Screw (R210)	048-0165	1								
8	Wave Washer 12mm	048-0113	2	80	O-Ring	048-0167	2								
9	Nylock Nut M10	F-NNIF-M10-ST-BO	2	81	33.9 Pin	048-0168	1								
10	Cap Screw M5x20	F-SHCS-M5-20-ST-BO	5	82	Bevel Lock lever (R210)	048-0169	1								
11	Table positioning handle (R210)	048-0106	1	83	Flat Washer 8mm	048-0171	1								
12	Spring	048-0108	3	84	Cap Tapping Screw 5x20	F-TFPX-5-20-ST-BO	1								
13	Table locking knob (R210)	048-0109	1	85	Cable Strain	048-0172	1								
14	Push Rod	048-0111	1	86	Rail stop (R210)	048-0173	1								
15	External E-clip 6mm	048-0112	2	96	Blade Guard Torsion Spring	048-0183	1								
16	Tapping Screw 4X16	F-TFPX-4-16-ST-BO	3	97	Blade Guard	048-0184	1								
17	Screw M6x43	F-HB-M6-43-8-ST-BO	1	98	Blade guard Retaining ring	048-0185	1								
18	Nylock Nut M6	F-NNIF-M6-ST-BO	1	99	Inner flange	048-0186	1								
19	Table	048-0114	1	100	Outer flange	048-0187	1								
20	Plate Indicator (R210)	048-0115	1	101	Arbour Bolt M8x16	048-0188	1								
21	Flat Washer 5mm	F-W-M5-ST-BO	2	102	Guard Roller	048-0189	1								
22	Cross Head Screw M5X12	F-SPHPZ-M5-12-ST-BO	4	103	Washer	F-W-M4-ST-BO	1								
23	Cap Screw M6x30	F-SHCS-M6-30-ST-BO	3	104	Tapping Screw 4X10	F-TFPX-4-10-ST-BO	2								
24	Grub Screw M6X20	F-SSCCP-M6-20-ST-BO	2	105	Motor End Cap (R210)	048-0192	1								
25	Hex Nut M6	F-NSF-M6-ST-BO	4	106	Cross Head Screw M5X30	F-SPHPZ-M5-30-ST-BO	4								
26	Hex Head Bolt M10x45	F-HB-M10-45-25-ST-BO	1	108	Brush Holder Cap	048-0194	2								
27	Neck indicator (R210)	048-0117	1	109	Carbon Brush 110V	048-0249	2								
28	Connecting Bolt	048-0119	1	110	Brush Holder	048-0196	2								
29	Channel Guide (R210)	048-0120	1	111	Motor Housing	048-0197	1								
30	Fence	048-0122	1	112	Field Coil 110V UK	048-0199	1								
31	Movable fence	048-0123	1	113	Tapping Screw M4x68	F-TFPX-M4-65-ST-BO	2								
32	Wing screw (R210)	048-0124	3	114	Bearing Cap	048-0202	1								
33	Fence Bolts (custom hex bolts M6)	048-0248	5	118	Air Baffle	048-0207	1								
34	Grub Screw M6X16	F-SSCCP-M6-16-ST-BO	1	119	Head	048-0208	1								
39	Tapping Screw 4X14	F-TFPX-4-14-ST-BO	5	120	Cross Head Shoulder Screw M4X6.7	048-0209	1								
40	On/Off Switch	048-0131	1	121	Guard lock lever (R210)	048-0210	1								
41	Capacitor (110v) UK	048-0133	1	122	Torsion Spring	048-0212	1								
42	Laser Transformer (110V) UK	048-0137	1	123	Cap Screw M6x16	F-SHCS-M6-16-ST-BO	1								
43	Connection Block	048-0140	2	124	Head Stop	048-0213	1								
44	Cable Clamp	048-0141	1	125	Finger Guard	048-0214	1								
45	Cable Sheath	048-0142	1	126	Cross Head Screw / Washer M4X10	048-0190	2								
46	Power Cable 110V (UK)	048-0225	1	127	Trench Cut Adjustment	048-0215	1								
47	Lower Handle	048-0143	1	128	Trench cut Knob (R210)	048-0216	1								
48	Upper Handle	048-0144	1	129	Spindle lock	048-0218	1								
49	Trigger (R210)	048-0145	1	130	Compression Spring	048-0219	1								
50	Laser Switch	048-0147	1	131	Roll Pin 5mm	048-0220	1								
51	Cross Head Screw M5X40	F-SPHPZ-M5-40-ST-BO	2	132	Guard Stop	048-0223	1								
52	Cross Head Screw M5X16	F-SPHPZ-M5-16-ST-BO	3	135	Bearing 6x17x6	F-B-606-2Z	2								
53	External Circlip 16mm	F-CCEXT-16-100-ST-PO	2	136	Gearbox Assembly	048-0229	1								
54	head Pivot Axle	048-0148	1	137	Linkage Assembly	048-0230	1								
55	Cross Head Shoulder Screw M6x9	048-0149	2	138	Work piece clamp (R210)	048-0231	1								
56	Trench stop	048-0150	1	139	Laser Assembly	048-0233	1								
57	Cross Head Shoulder Screw M6x9	048-0151	1	140	Armature Assembly 110V UK	048-0235	1								
58	Torsion Spring	048-0152	1	141	Slide Shaft Locking unit	048-0238	1								
65	Cable tidy (R210)	048-0154	2	142	Cross Head Screw M6X16	F-SPHPZ-M6-16-ST-BO	1								
66	External E-clip 8mm	048-0156	1	143	Flat Washer 4mm	F-W-M4-ST-BO	1								
67	Lockdown Pin Knob	048-0157	1	144	Wave Washer 7mm	048-0239	1								
68	Laser Wire Cover	048-0158	1	151	Cap screw M6x22	F-SHCS-M6-22-ST-BO	2								
69	Cross Head Screw M4x8	F-SPHPZ-M4-8-ST-BO	4	152	Cord Clip 110V & 120V	048-0246	1								
70	Head Pivot	048-0159	1	153	Label Set110V	048-0251	1								
71	Rail	048-0160	2												
72	Bevel bracket Cover	048-0161	2												
												 R210SMS (110V UK) Sliding Mitre Saw			
												Service Parts List 048-0002.02			