

| DWG No | Description | Part Code | Qty | DWG No | Description | Part Code | Qty |
|--------|-----------------------------|----------------------|-----|--------|----------------------|-----------|-----|
| 1 | Table Insert | 056-0101 | 1 | 161 | Connector | 056-0244 | 1 |
| 2 | Cross Head Screw | 056-0102 | 1 | 162 | Overload Wire | 056-0245 | 1 |
| 3 | Countersunk Inner Hex Screw | F-SCHS-M6-25-ST-BO | 8 | 163 | Overload Switch 230V | 056-0246 | 1 |
| 4 | Table | 056-0103 | 1 | 166 | Hold Down Clamp | 056-0254 | 1 |
| 5 | Nut | F-NSF-M6-ST-BZP | 44 | 167 | Angle Gauge | 056-0255 | 1 |
| 6 | Square Neck Screw | 056-0104 | 7 | 168 | Blade Guard | 056-0256 | 1 |
| 7 | Left Guide Rail | 056-0105 | 1 | 169 | Rip Fence Assembly | 056-0257 | 1 |
| 9 | Circlip | F-CCEXT-10-090-ST-PO | 2 | 170 | Gearbox Assembly | 056-0258 | 1 |
| 10 | Rotating Shaft | 056-0108 | 1 | 171 | Motor Assembly | 056-0259 | 1 |
| 11 | Rotating Shaft Fixing Block | 056-0109 | 2 | 172 | Handle Assembly | 056-0260 | 1 |
| 12 | Locking Plate | 056-0110 | 2 | 174 | Right Guide Rail | 056-0261 | 1 |
| 15 | Socket Head Cap Screw | F-SHCS-M5-12-ST-BO | 7 | 175 | Assembly Screw Kit | 056-0262 | 1 |
| 16 | Wing Nut | 056-0113 | 6 | | | | |
| 20 | Thread Forming Screw | F-TFPX-4.2-13-ST-BO | 11 | | | | |
| 37 | Carbon Brush (Pair) | 056-0130 | 2 | | | | |
| 39 | Spring Washer M5 | F-SWA-M5-ST-BO | 11 | | | | |
| 40 | Washer M5 | F-W-M5-ST-BO | 5 | | | | |
| 59 | Spring Washer | F-SWA-M4-ST-BO | 3 | | | | |
| 60 | Pan Head Screw | F-SPHPZ-M4-10-ST-BO | 3 | | | | |
| 61 | Hanger Frame | 056-0152 | 1 | | | | |
| 62 | Blade Cover | 056-0153 | 1 | | | | |
| 63 | Inner Flange | 056-0154 | 1 | | | | |
| 64 | Washer | 056-0155 | 2 | | | | |
| 66 | Outer Flange | 056-0156 | 1 | | | | |
| 67 | Blade Bolt | 056-0157 | 1 | | | | |
| 68 | Dust cover | 056-0158 | 1 | | | | |
| 69 | Screw | F-SBHPZ-M5-10-ST-BZP | 4 | | | | |
| 70 | Extraction Hose | 056-0159 | 1 | | | | |
| 71 | Blade Guard Plate | 056-0160 | 1 | | | | |
| 72 | Spring | 056-0161 | 1 | | | | |
| 73 | Washer | 056-0162 | 6 | | | | |
| 74 | Angle Indicator | 056-0163 | 1 | | | | |
| 75 | Hanger Frame Plate | 056-0164 | 1 | | | | |
| 76 | Washer | 056-0165 | 1 | | | | |
| 77 | Spring | 056-0166 | 1 | | | | |
| 78 | Bevel Lock Knob | 056-0167 | 1 | | | | |
| 79 | Bevel Bracket | 056-0168 | 1 | | | | |
| 80 | Washer | 056-0169 | 1 | | | | |
| 81 | Bevel Gear | 056-0170 | 2 | | | | |
| 91 | Screw | F-SPHPZ-M4-20-ST-BO | 2 | | | | |
| 92 | Washer M5 | F-W-M5-ST-BZP | 5 | | | | |
| 93 | Bevel Gear Washer | 056-0179 | 1 | | | | |
| 94 | Threaded Rod | 056-0180 | 1 | | | | |
| 95 | Double Nut | 056-0181 | 1 | | | | |
| 96 | Countersunk Screw | F-SCHPZ-M5-14-ST-BO | 4 | | | | |
| 97 | Drive Plate | 056-0182 | 2 | | | | |
| 98 | Locknut | F-NNIF-M5-ST-BO | 4 | | | | |
| 99 | Flanged Bolt | F-HFB-M6-16-ST-BZP | 2 | | | | |
| 100 | Riving Knife Clamp | 056-0183 | 1 | | | | |
| 101 | Riving Knife | 056-0184 | 1 | | | | |
| 102 | Riving Knife Bracket | 056-0185 | 1 | | | | |
| 105 | Thread Forming Screw | F-TFPX-4.2-16-ST-BO | 5 | | | | |
| 107 | Angle Label | 056-0189 | 1 | | | | |
| 108 | Nut | F-NSF-M5-ST-BO | 5 | | | | |
| 109 | Gear Rack | 056-0190 | 1 | | | | |
| 110 | Countersunk Screw | F-SCHPZ-M5-12-ST-BO | 3 | | | | |
| 111 | Capacitor 230V | 056-0191 | 1 | | | | |
| 112 | Switch 230V | 056-0196 | 1 | | | | |
| 113 | Switch Box | 056-0201 | 1 | | | | |
| 114 | Switch Box Cover | 056-0202 | 1 | | | | |
| 115 | 45° Bush | 056-0203 | 1 | | | | |
| 116 | 90° Bush | 056-0204 | 1 | | | | |
| 117 | Cable Clamp | 056-0205 | 2 | | | | |
| 118 | Cord Protector | 056-0206 | 1 | | | | |
| 119 | Power Cord 230V (EU) | 056-0208 | 1 | | | | |
| 120 | Main Casing | 056-0212 | 1 | | | | |
| 121 | Threaded Spacer | 056-0213 | 1 | | | | |
| 122 | Washer | 056-0214 | 1 | | | | |
| 123 | Blade Spanner (A) | 056-0215 | 1 | | | | |
| 124 | Blade Spanner (B) | 056-0216 | 1 | | | | |
| 125 | Bolt | F-HB-M6-14-ST-BZP | 36 | | | | |
| 127 | Beam (B) (Long) | 056-0218 | 2 | | | | |
| 128 | Leg | 056-0219 | 4 | | | | |
| 129 | Rubber Foot | 056-0220 | 4 | | | | |
| 130 | Beam (C) (Short) | 056-0221 | 2 | | | | |
| 131 | Stability Support | 056-0222 | 2 | | | | |
| 132 | Push Stick | 056-0223 | 1 | | | | |
| 133 | Table Support Bar | 056-0224 | 4 | | | | |
| 134 | Extension Table | 056-0225 | 2 | | | | |
| 135 | Push Stick Support | 056-0226 | 1 | | | | |
| 137 | Spring Washer (M6) | F-SWA-M6-ST-BZP | 36 | | | | |
| 138 | Washer (M6) | F-W-M6-ST-BO | 36 | | | | |
| 143 | Set Screw | 056-0232 | 1 | | | | |
| 145 | Case Label | 056-0234 | 1 | | | | |
| 147 | Flanged Bolt | F-HFB-M6-25-BZP | 4 | | | | |
| 149 | Square Neck Screw | 056-0235 | 1 | | | | |
| 150 | O ring | 056-0236 | 1 | | | | |
| 151 | Plate | 056-0237 | 1 | | | | |
| 153 | Screw | F-SPHPZ-M4-8-ST-BO | 1 | | | | |

evolution[®]

FURY5-S
Multipurpose Table Saw

Service Parts List

REV. 1.1
056-0003 (EU 230V)