

Item	Description	Part No	Qty	Item	Description	Part No	Qty	Item	Description	Part No	Qty
M1	Back clamp unit	R3SM1	1	63	Linear ball bearing	R3S63	2	147	Carbon brush (pair)	R3S147	1
M2	Bevel lever kit	R3SM2	1	64	Bearing separator sleeve	R3S64	1	148	Brush holder cap	R3S148	2
M3	Extension support stop	R3SM3	1	65	Sliding bar support pad	R3S65	4	149	Tapping screw	R3S149	2
M4	Laser unit kit	R3SM4	1	66	Angle scale	R3S66	1	150	Rear cover	R3S150	1
M5	Guard mech kit	R3SM5	1	67	Hexagon nut M8	R3S67	4	151C	Cable & Plug 115v US	R3S151C	1
M6	Table lock kit	R3SM6	1	68	Grubscrew M8x16	R3S68	4	152	Cable sheath	R3S152	1
M7	Gearbox unit	R3SM7	1	69	Bevel bracket	R3S69	1	153	Head pivot stop	R3S153	1
M8	Channel guide kit	R3SM8	1	70	Spring	R3S70	1	165	Flat washer 5mm	R3S165	4
M9	Front clamp unit	R3SM9	1	71	Slide locking knob	R3S71	1	166	Countersunk screw M4x12	R3S166	3
1	Extension support	R3S1	2	72	Back support	R3S72	1	167	Blade Spanner	R3S167	1
2	Rubber foot	R3S2	4	73	Cable clamp	R3S73	1	168	Exhaust port tube	R3S168	1
3	Flat washer 4mm	R3S3	8	74	Flat washer 12mm	R3S74	2	169	Exhaust port plug	R3S169	1
4	Cross head screw M4x10	R3S4	22	75	Wave washer 12mm	R3S75	1	170	Laser protector	R3S170	2
5	Flat washer 10mm	R3S5	2	76	Nylock nut M12	R3S76	1	174	Dust bag	R3S174	1
6	Wave washer 10mm	R3S6	1	82	Hex bolt M8x20 (l/hand thread)	R3S82	1	175	Guard release screw	R3S175	1
7	Nylock nut M10	R3S7	1	83	Washer 8mm	R3S83	1	176	Guard release clip	R3S176	1
8	Cross head screw M5x20	R3S8	2	84	Outer Flange	R3S84	1	177	Chip deflector	R3S177	1
9	Base	R3S9	1	86	Inner Flange	R3S86	1	178	Cross head screw M5x10	R3S178	1
9a	Base for front clamps	R3S9a	1	87	Ext circlip 48mm	R3S87	1				
10	Tapping screw ST4x16	R3S10	3	88	Movable blade guard	R3S88	1				
11	Support Block	R3S11	1	89	Speed sensor	R3S89	1				
12	Table positioning handle	R3S12	1	90	Magnet	R3S90	1				
13	Spring	R3S13	1	91	Cross head screw M3x5	R3S91	1				
14	Table locking knob	R3S14	1	92	Guard return spring	R3S92	1				
15	Table locking lever	R3S15	1	102	Left handle	R3S102	1				
16	Cross head screw M5x10	R3S16	4	103	Inductor	R3S103	1				
17	Lock lever clamp	R3S17	1	104	Capacitor (115v Unit)	R3S104	1				
18	Nylock nut M6	R3S18	1	105	On/Off switch	R3S105	1				
20	Screw	R3S20	1	106	Spring for lock switch	R3S106	1				
21	Table	R3S21	1	107	Lock switch knob	R3S107	1				
22	Table angle indicator	R3S22	1	108	Middle connect rod lock switch	R3S108	1				
23	Hexagon head bolt M10x45	R3S23	1	109	Lower connect rod lock switch	R3S109	1				
26	Wing screw	R3S26	2	110	Middle connect rod spring	R3S110	1				
27	Self tapping screw ST4x45	R3S27	2	111	Cross head screw M4x10	R3S111	1				
28	Cable clamp	R3S28	1	112	Right handle	R3S112	1				
29	Connection block	R3S29	10	113	Self tapping screw ST4x20	R3S113	1				
30	Terminal box base	R3S30	1	121	Spindle lock	R3S121	1				
31	Laser Transformer 115v	R3S31	1	122	Split Pin 3x20	R3S122	1				
32	Terminal box lid	R3S32	1	123	Spring	R3S123	1				
33	Laser switch	R3S33	1	124	Cover stop block	R3S124	1				
38	Back fence	R3S38	1	125	Frame safety cover	R3S125	1				
39	Flat washer 6mm	R3S39	4	126	Gearbox housing	R3S126	1				
40	Cap screw M6x22	R3S40	6	127	Blade housing	R3S127	1				
41	Cap screw M8x25	R3S41	3	128	limiting block	R3S128	1				
42	Connecting bolt	R3S42	1	129	Cap screw M4x6	R3S129	1				
43	Hexagon nut M6	R3S43	2	130	Wing nut	R3S130	1				
44	Bevel bracket seat	R3S44	1	131	limiting stop screw	R3S131	1				
45	Bevel angle indicator	R3S45	1	132	Seal plate	R3S132	1				
49	Pin 6x45	R3S49	4	133	Seal ring	R3S133	1				
50	Head Pivot axle	R3S50	1	134	Ball bearing 6201	R3S134	1				
51	Torsion spring	R3S51	1	135	PCB 115v	R3S135	1				
52	Head pivot block	R3S52	1	136	PCB cover	R3S136	1				
53	Head lockdown pin	R3S53	1	137	Armature 115v	R3S137	1				
54	O seal ring	R3S54	1	138	Ball bearing 629	R3S138	1				
55	Rubber stop	R3S55	2	139	Air baffle	R3S139	1				
56	Lockdown pin knob	R3S56	1	140	Self tapping screw ST5x72	R3S140	2				
57	Main sliding shaft	R3S57	1	141	Spring washer 5mm	R3S141	6				
58	Secondary sliding shaft	R3S58	1	142	Field coil 115v	R3S142	1				
59	Spring washer 4mm	R3S59	4	143	Motor housing	R3S143	1				
60	Bevel bracket cover	R3S60	2	144	Label set 115v	R3S144	1				
61	Main sliding shaft seal ring	R3S61	4	145	Cross head screw M5x30	R3S145	4				
62	Antifriction ring	R3S62	1	146	Brush holder	R3S146	2				

Evolution Power Tools LLC
5567 Carey Avenue, Davenport, Iowa, 52807, USA
Tel: 1 866 386 8665 Fax: 1 563 386 8010 www.evolutionpowertools.com



RAGE 3

Dual Rail Slide Mitre S.A.W.

040-0003.01

Service Parts List