



DWG No	Description	Part Code	Qty	DWG No	Description	Part Code	Qty	DWG No	Description	Part Code	Qty
1	Thread Forming Screw 4x16	F-TFPX-4-16-ST-BO	6	81	Guide Bracket	065-0158	1				
2	Rear Cover	065-0198	1	82	Table Cap (Top)	065-0220	1				
3	Carbon Brush (Pr)	065-0129	2	83	Scale Label	065-0210	1				
6	Motor Housing	065-0182	1	84	Push Stick	065-0196	1				
7	Thread Forming Screw 8x45	F-TFPX-8-45-ST-BO	2	85	Table (Top)	065-0218	1				
8	Thread Forming Screw 8x50	F-TFPX-8-50-ST-BO	2	86	Thread Forming Screw 5.5x20	F-TFPX-5.5-20-ST-BO	2				
9	Field Coil 100V	065-0145	1	87	Screw M4x10	F-SPHPZ-M4-10-ST-BO	6				
10	Thread Forming Screw 8x60	F-TFPX-8-60-ST-BO	2	88	Guard Plate	065-0157	1				
11	Air Baffle	065-0104	1	92	Fence	065-0143	1				
12	Bearing-608-2Z	F-B-608-2Z	1	93	Knob	065-0171	2				
13	Armature 100V	065-0105	1	95	Guard	065-0101	1				
14	Bearing-6200-2Z	F-B-6200-2Z	1	99	Solenoid switch 100V	065-0213	1				
15	Pin	065-0185	1	100	Screw M5x25	F-SPHPZ-M5-25-ST-BO	4				
16	Nylock Nut M12	F-NNIF-M12-ST-BO	1	101	Handle Blank	065-0163	1				
17	Washer	065-0228	1	102	Handle (Upper)	065-0162	1				
18	Knob	065-0169	1	103	Handle (Lower)	065-0161	1				
19	Gearbox Housing	065-0156	1	104	Torsion Spring	065-0226	1				
20	Interlock	065-0166	1	105	Bevel Pointer	065-0115	1				
21	Interlock Screw	065-0167	2	106	Bevel Bolt	065-0112	1				
22	Interlock Spring	065-0168	1	107	Pin	065-0186	1				
23	"O" Seal Ring	065-0102	1	108	Bevel Bracket	065-0113	1				
24	Push Pin (Interlock)	065-0195	1	109	Connecting Bolt	065-0135	1				
25	Guide Pin Clamp Rod	065-0159	1	110	Bevel Label	065-0114	1				
26	Cable Clamp	065-0123	2	111	Nut M6	F-NSF-M6-ST-BO	2				
27	Screw M4x12	F-SPHPZ-M4-12-ST-BO	6	112	Cap Screw M6x18	F-SHCS-M6-18-ST-BO	2				
30	Gearbox	065-0154	1	113	Hex Bolt M8x35	F-HB-M8-35-ST-BO	1				
35	Countersunk Screw M4x12	F-SCHPZ-M4-12-ST-BO	2	114	Washer M8	F-W-M8-ST-BO	2				
36	Riving Knife	065-0206	1	115	Wave Washer 8mm	065-0230	1				
37	Riving Knife Gasket	065-0207	1	116	Lower Table Guard	065-0179	1				
38	Cap Screw M5x14	F-SHCS-M5-14-ST-BO	2	117	Table Pointer	065-0222	1				
39	Button	065-0122	1	118	Lower Table	065-0178	1				
40	Lever	065-0174	1	119	Table Cap (Lower)	065-0219	1				
41	Lever Screw	065-0175	1	120	Safety Cover	065-0209	1				
42	Tension Spring (1)	065-0223	1	121	Clamp Knob	065-0132	2				
44	E-Clip 5mm	065-0141	1	122	Set Screw M6x16	F-SSCFP-M6-16-ST-BO	1				
47	Blade Guard Assembly	065-0118	1	123	Cap Screw M6x14	F-SHCS-M6-14-ST-BO	2				
51	Fixing Stud	065-0149	1	124	Moveable Fence	065-0183	1				
56	Retainer	065-0203	1	125	Fence	065-0144	1				
57	Countersunk Screw M4x8	F-SCHPZ-M4-8-ST-BO	11	126	Extension Support	065-0142	2				
58	Inner Flange	065-0165	1	127	Rubber Foot	065-0208	4				
60	Outer Flange	065-0184	1	128	Screw M5x8	F-SPHPZ-M5-8-ST-BO	2				
61	Blade Bolt Washer	065-0117	1	129	Base	065-0109	1				
62	Blade Bolt M8x18 (L/H)	065-0116	1	130	Steel Ball 8mm	065-0217	1				
63	Table Locking Screw	065-0221	1	131	Positioning Spring	065-0188	1				
64	Screw M5x14	F-SPHPZ-M5-14-ST-BO	4	132	Set Screw M10x10	F-SSCCP-M10-10-ST-BO	1				
65	Gearbox Cover	065-0155	1	133	Rear Stabiliser	065-0202	1				
66	Knob	065-0170	3	134	Hold Down Clamp	065-0164	1				
67	Screw M4x45	F-SPHPZ-M4-45-ST-BO	2	142	Nylock Nut M8	F-NNIF-M8-ST-BO	2				
68	Terminal Lid	065-0225	1	143	HEXKEY M6	F-HEXKEY-M6-ST-BO	1				
69	Capacitor 100V	065-0124	1	144	Dust Port	065-0140	1				
70	Connection Block	065-0137	3	145	HEXKEY M5	F-HEXKEY-M5-ST-BO	2				
71	Cord Protector	065-0139	1	146	Pin Spanner	065-0187	1				
72	Thread Forming Screw 8x15	F-TFPX-8-15-ST-BO	4								
73	2-Core Lead	065-0103	1								
74	Power Cord 100V	065-0190	1								
75	Terminal Base	065-0224	1								
76	Bush	065-0121	1								
77	Nylock Nut M8	F-NNIF-M8-ST-BO	3								
78	Washer	065-0229	1								
79	Screw M4x8	F-SPHPZ-M4-8-ST-BO	4								
80	Bracket	065-0119	1								

evOLUTION[®]

FURY6
Multipurpose Table/Mitre Saw

Service Parts List

065-0005.01