



DWG No	Description	Part Code	Qty	DWG No	Description	Part Code	Qty
M1	BLADE GUARD	F6SM1	1	58	Bracket	F6S58	1
M2	TOP CLAMP	F6SM2	1	59	Screws	F6S59	6
M3	ANGLE GUAGE	F6SM3	1	60	Latch Bar	F6S60	1
M4	SAFETY COVER ASSEMBLY	F6SM4	1	61	Button	F6S61	1
M5	GEARBOX UNIT	F6SM5	1	62	"O" Ring	F6S62	1
1	Self-tapping screws	F6S1	8	63	push pin (interlock)	F6S63	1
2	Rear cover	F6S2	1	64	Interlock plate 2	F6S64	1
3	"Constant speed circuit board & box	F6S3	1	65	Tension spring	F6S65	3
4	Speed sensor	F6S4	1	72	Countersunk screw	F6S72	1
5	Upper Switch Handle	F6S5	1	75	fixing stud	F6S75	1
6	Self-tapping screws	F6S6	5	84	Bearing retainer	F6S84	1
7	Pan head screw	F6S7	4	85	Lower Blade flange	F6S85	1
8	Terminal connector	F6S8	1	87	Upper Blade Flange	F6S87	1
9	Capacitor	F6S9	1	88	Washer	F6S88	1
10	Switch	F6S10	1	89	Cap Screw	F6S89	1
11	Solenoid switch	F6S11	1	90	Dust Tube	F6S90	1
12	lower Switch Handle	F6S12	1	91	Screw	F6S91	6
13	Motor Housing	F6S13	1	92	frame cover	F6S92	1
14	Field Coil 230V UK/EU	F6S14	1	105	Table Top	F6S105	1
15	Self-tapping screws	F6S15	2	106	table lining plate	F6S106	1
16	wire guide plate	F6S16	1	107	table locking screw	F6S107	1
17	Screws	F6S17	1	108	table locking knob	F6S108	1
18	magnet ring and plastic parts 1	F6S18	1	115	Safety Cover interlock	F6S115	1
19	magnet ring	F6S19	1	116	Movable fence	F6S116	1
20	magnet ring and plastic parts 2	F6S20	1	117	Cap Screw	F6S117	2
21	Bearing	F6S21	1	118	Clamp Screw	F6S118	2
22	Screws	F6S22	2	119	Clamp Screw	F6S119	1
23	Upper junction box	F6S23	1	120	Hex socket set screw	F6S120	1
24	Inter lock Knob	F6S24	1	121	Fence	F6S121	1
25	Push rod (interlock)	F6S25	1	122	Table Insert	F6S122	1
26	Micro switch	F6S26	1	123	Hex head bolt	F6S123	1
27	Cock	F6S27	1	124	Turn Table	F6S124	1
28	Cable grip	F6S28	1	125	Square nut	F6S125	4
29	power Cable 230V UK	F6S29	1	126	lower table guard	F6S126	1
29A	Power Cord 230V EU	F6S29A	1	133	Pivot Axel	F6S133	1
30	Cable shield	F6S30	1	134	Bevel Housing	F6S134	1
31	lower junction box	F6S31	1	135	Bevel Pointer	F6S135	1
32	Three core cable	F6S32	1	136	Bevel Locking Handle	F6S136	1
33	carbon brush	F6S33	2	137	torsion spring	F6S137	1
36	Armature 230v UK/EU	F6S36	1	138	Socket set screw	F6S138	4
37	Bearing	F6S37	1	139	Bevel base	F6S139	1
38	Nylock Nut	F6S38	1	140	Cap hex screw	F6S140	4
39	Washer	F6S39	1	141	Bolt	F6S141	4
40	Button head Bolt	F6S40	1	142	Cap screw	F6S142	4
41	frame	F6S41	1	143	hex nut	F6S143	4
42	Nylock Nut	F6S42	1	144	lower Axel tube	F6S144	1
43	Screw	F6S43	4	145	extend feet	F6S145	2
44	Tension spring	F6S44	1	146	extend feet pad	F6S146	2
45	Interlock Plate	F6S45	1	147	Base	F6S147	1
46	Riving knife	F6S46	1	148	Base Feet	F6S148	4
47	Fixing Plate	F6S47	1	149	Screw	F6S149	2
48	Cap screw	F6S48	2	150	Push rod	F6S150	1
49	Post Screw	F6S49	1	151	Steel ball	F6S151	1
50	Screw	F6S50	4	152	Positioning spring	F6S152	1
51	Rivet	F6S51	1	153	Set screw	F6S153	1
52	Plate 1	F6S52	1	154	Table lock Screw	F6S154	1
53	Plate 2	F6S53	1	155	Washer	F6S155	2
54	Circlip	F6S54	1	156	Wave washer	F6S156	1
55	Tension spring	F6S55	1	157	scale label	F6S157	1
56	locknut	F6S56	1				
57	Screws	F6S57	1				

FURY6
Multipurpose Table/Mitre Saw

Service Parts List

REV.
1.02